

USB module Sound Loader Instructions

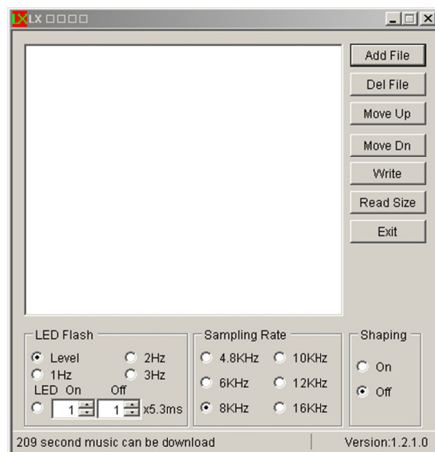
v1.2.1.0 (USB)



Step 1: Plug the USB module into a free USB slot in your PC


Step 2: Load the Sound Loader software

Click on: START > PROGRAMS > Sound Loader > Sound Loader 128Mbit



Step 3: Load the sound clip(s)

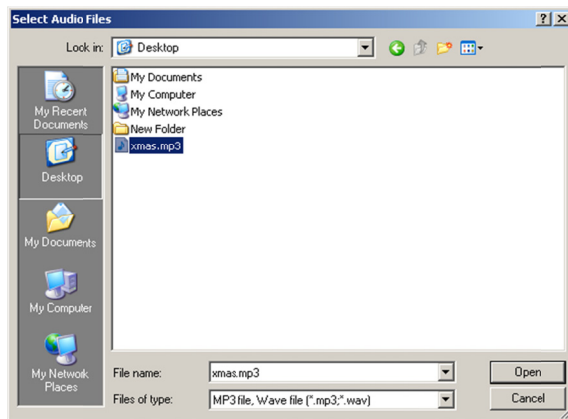
Click the **ADD FILE** button. Choose your sound file(s) (MP3 or WAV). Then click on **OPEN**. When done your sound file will be listed in the main box.



NOTE: You can add up to 20 different sound files. Each activation will play only one sound. The sounds will play in the order that they are listed. You can use the **MOVE UP**, **MOVE DN** and **DEL FILE** buttons to edit the playlist.

Step 4: Choose the appropriate settings

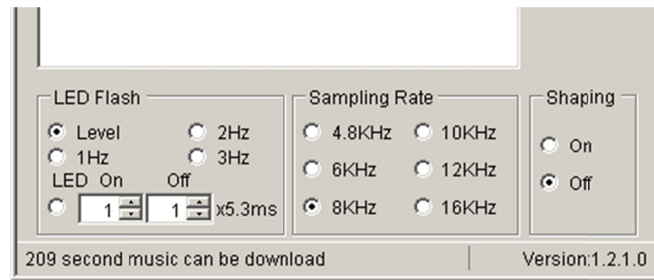Description of settings:



LED Flash (ignore)

Does not apply to this module. Changing this setting will have no effect.

Shaping

Default is OFF. Depending on the type of sound the program can run filters that may improve the sound quality. However in most cases this setting can be left at OFF.

Sampling Rate

This is the quality vs. duration setting. The higher the setting the higher the sound quality. However the higher the setting the less amount of sound (duration) you can fit onto the chip. Likewise the lower the setting the lower the sound quality, but also the more amount of sound you can fit.

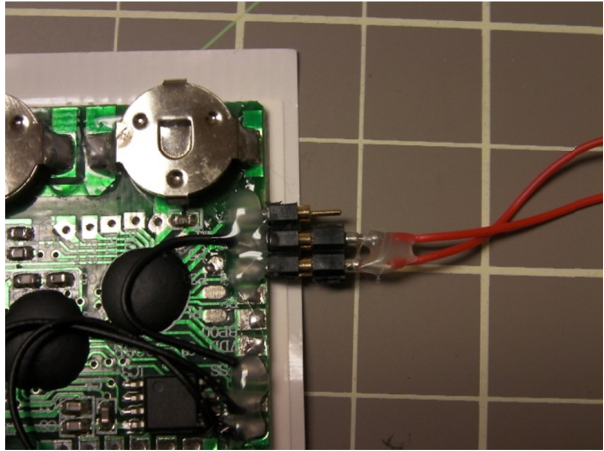
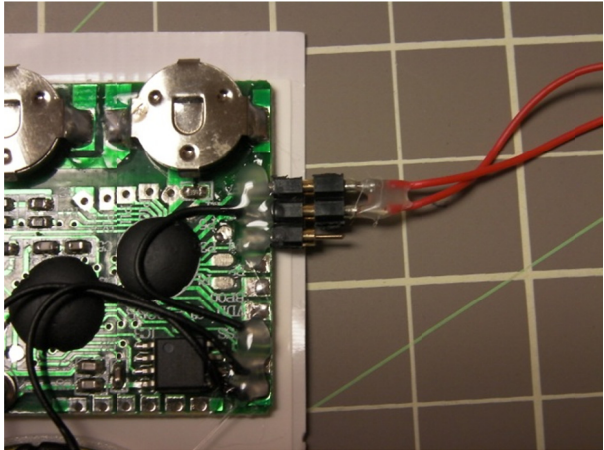
For each setting, the program will display (at the bottom) how much sound you can fit. This is an estimate only so the actual limit may be about 2-3 seconds less.

Step 5: Write the sound file onto the module



Click on the **WRITE** button.

REMEMBER: Remove the **PLASTIC TAB** under the battery to activate module playback.

Playback Configuration:

	SETTING	PLAYBACK EFFECT
	<p>Pins 1-2: The two pins <u>furthest</u> away the battery.</p>	<ul style="list-style-type: none">• Multiple message playback.• Each activation plays the next message.• If activated during playback, it will immediately skip to the next message.
	<p>Pins 2-3: The two pins <u>closest</u> to the battery.</p>	<ul style="list-style-type: none">• Single message playback.• Start/stop activation• If activated during playback, message will stop playing.• If activated again, module will start playback from the beginning of the message.

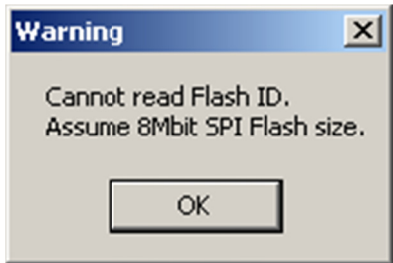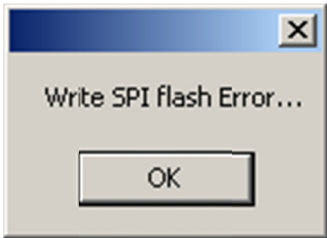Troubleshooting: (software)

PROBLEM	CAUSE	REMEDY
	Cannot find module: <ul style="list-style-type: none"> • Module not connected • Module not connected properly 	<ul style="list-style-type: none"> • Unplug module and reinsert. • Try using a different USB port. • Try a different cable.
	Windows did not automatically install drivers properly.	<ul style="list-style-type: none"> • Restart windows.
	Sampling Rate setting is set to high or sound file is too long.	<ul style="list-style-type: none"> • Choose a lower setting. • Cut sound file shorter using sound editing software (eg. Audacity).
Program freezes or hangs	One of the above errors occurred, but the program failed to display the error.	<ul style="list-style-type: none"> • Press the ESC button. • Look at the taskbar for any related windows and close them. • Try the above remedies and try to WRITE again.
Module will not play.	Not programmed properly	<ul style="list-style-type: none"> • Try reprogramming again.
	Battery problem.	<ul style="list-style-type: none"> • Make sure the PLASTIC TAB is removed from underneath one of the batteries. • Completely remove the batteries and reinsert them. You may gently pry off any hot glue that may be in the way.

Troubleshooting:

If your sound is too long, or if your sound is too soft, you can use sound editing software to adjust your sound file.

Many of our customers use “Audacity” which is free and can be downloaded at <http://audacity.sourceforge.net>

You can also find resources on YouTube showing how to edit sound files.

YOUTUBE SEARCH RESULTS FOR “AUDACITY CUTTING SONGS”

http://www.youtube.com/results?search_query=audacity+cutting+songs

YOUTUBE SEARCH RESULTS FOR “AUDACITY AMPLIFY VOLUME”

http://www.youtube.com/results?search_query=AUDACITY+AMPLIFY+VOLUME